



Mist 設定マニュアル - WAN Assurance - WAN Edge の登録 Site へのアサイン

ジュニパーネットワークス株式会社
2024年12月 Ver 1.0


はじめに

- ❖ 本マニュアルは、『WAN Assurance における WAN Edge の Site へのアサイン』について説明します
- ❖ 手順内容は 2024年12月 時点の Mist Cloud にて確認を実施しております
実際の画面と表示が異なる場合は以下のアップデート情報をご確認ください
<https://www.mist.com/documentation/category/product-updates/>
- ❖ 設定内容やパラメータは導入する環境や構成によって異なります
各種設定内容の詳細は下記リンクよりご確認ください
<https://www.mist.com/documentation/>
- ❖ 他にも多数の Mist 日本語マニュアルを「ソリューション&テクニカル情報サイト」に掲載しております
<https://www.juniper.net/jp/ja/local/solution-technical-information/mist.html>
- ❖ **本資料の内容は資料作成時点におけるものであり事前の通告無しに内容を変更する場合があります**
また本資料に記載された構成や機能を提供することを条件として購入することはできません


Site へのアサイン

WAN Edge を Site へアサインする

1. [Organization] から [Inventory] をクリックします

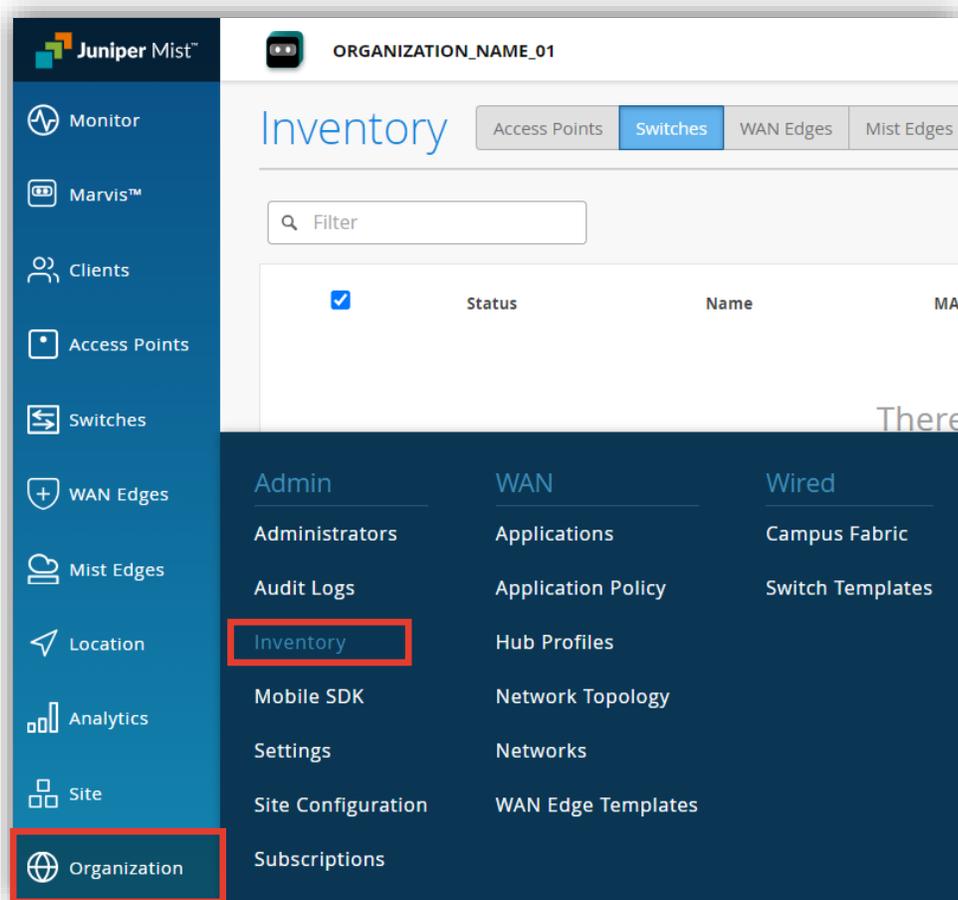

2. [WAN Edges] をクリックします

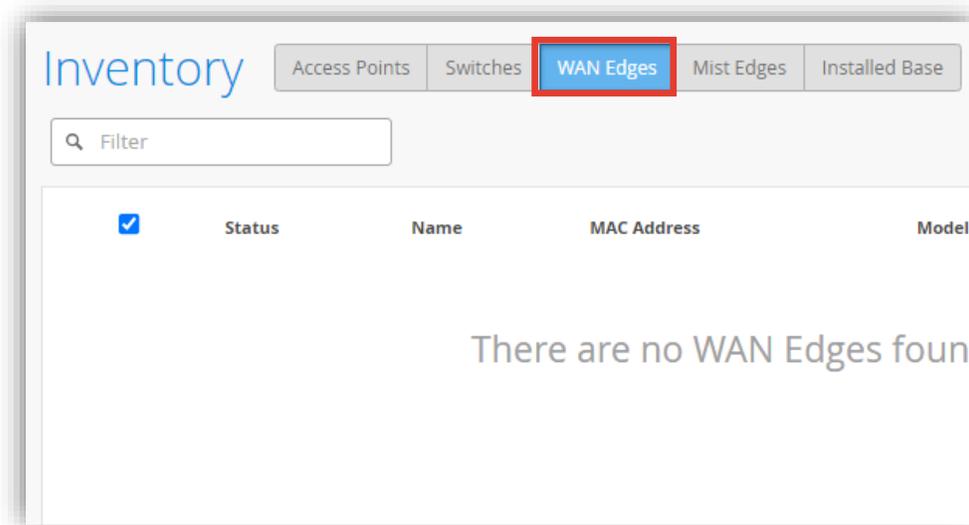

Site へのアサイン

WAN Edge を Site へアサインする

3. WAN Edge 一覧から Site へアサインする機器を選択します
4. [More] をクリックし表示されるプルダウンの項目の中から [Assign to Site] をクリックします

The screenshot shows the Juniper Inventory management interface. At the top, there are tabs for 'Access Points', 'Switches', 'WAN Edges', 'Mist Edges', and 'Installed Base'. The 'WAN Edges' tab is selected. To the right, there is a dropdown menu for 'org Entire Org' and a 'More' button. The 'More' button is clicked, and a dropdown menu is shown with options: 'Assign To Site' and 'Release'. The 'Assign To Site' option is highlighted. Below the navigation, there is a search bar labeled 'Filter' and a table of devices. The table has columns for 'Status', 'Name', 'MAC Address', 'Model', 'Site', 'Serial Number', and 'SKU'. The first row shows a device with status 'Unassigned', name 'SSR120', model 'SSR120', and site 'Unassigned'. The checkbox in the first column of this row is checked and highlighted with a red box.

<input type="checkbox"/>	Status	Name	MAC Address	Model	Site	Serial Number	SKU
<input checked="" type="checkbox"/>	Unassigned	SSR120	[REDACTED]	SSR120	Unassigned	[REDACTED]	SSR120-AA

Site へのアサイン

WAN Edge を Site へアサインする

5. アサインする Site を選択、[Manage Configuration with Mist] を選択し、[Assign to Site] をクリックします

Assign WAN Edges

Assign 1 selected WAN Edge to site site Primary Site

Manage Configuration

Manage configuration with Mist

Existing WAN Edge configuration will be overwritten with Mist configuration. Do not attempt to configure the WAN Edge via CLI once it is managed by Mist. Root password will be configured by the site(under site settings) to which the WAN Edge is assigned.

Assign to Site Cancel

[Manage configuration with Mist] にチェックを入れることで Mist Cloud 経由で WAN Edge の設定が行えるようになります

参考情報

警告文の内容

既存の WAN Edge 構成は Mist 構成で上書きされます
Mist によって管理された後は、コンソールを介して WAN Edge を構成しないでください
Root パスワードは、WAN Edge が割り当てられている Site (Site Configuration) によって構成されます


NOTE

SSR ではサイトアサイン後に Mist による設定管理の有効・無効を変更できません
有効にする場合、再度アサインを行い [Manage Configuration with Mist] をチェックします

Site へのアサイン

WAN Edge を Site へアサインする

6. 確認画面が表示されます
登録内容を確認し、[Close] をクリックします


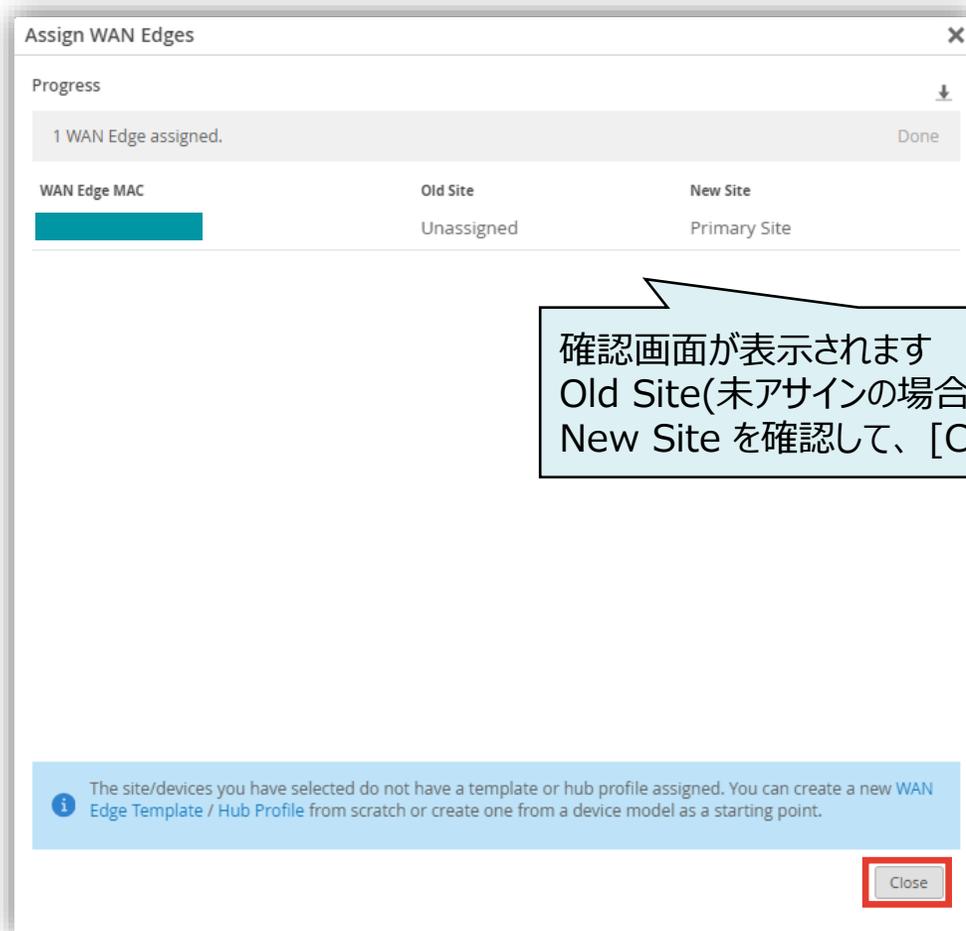


確認画面が表示されます
Old Site(未アサインの場合は Unassigned)と、
New Site を確認して、[Close] をクリックします


Site へのアサイン

WAN Edge を Site へアサインする

7. [Organization] から [Inventory] で、[WAN Edges] タブをクリック、Site にアサインされたことを確認します

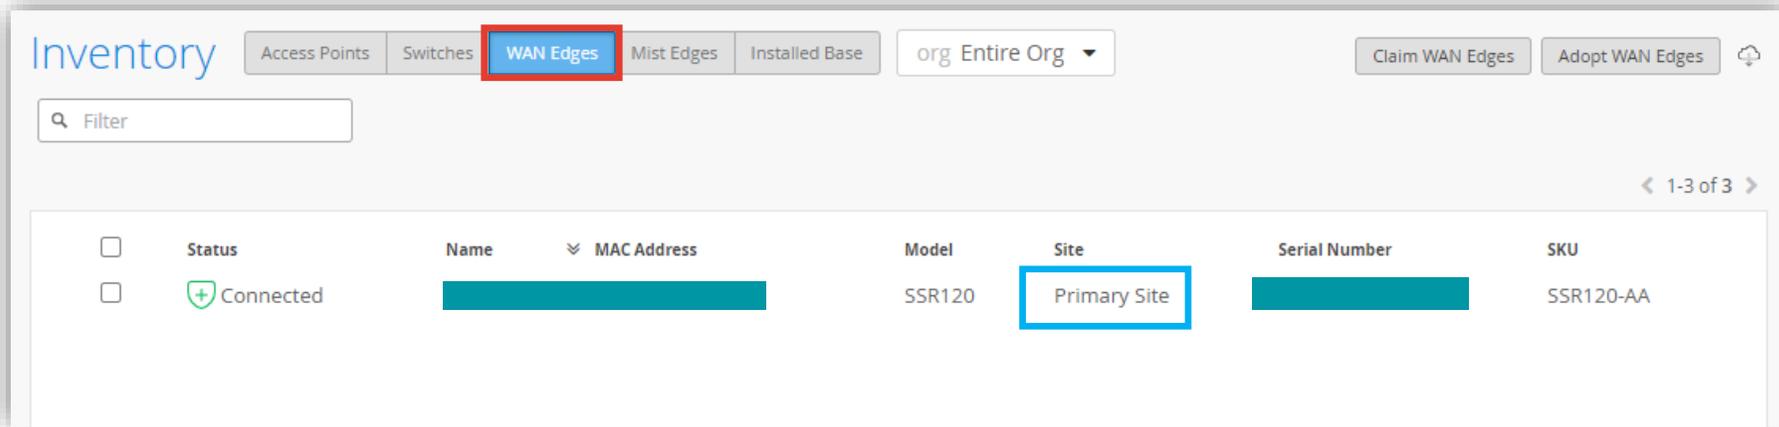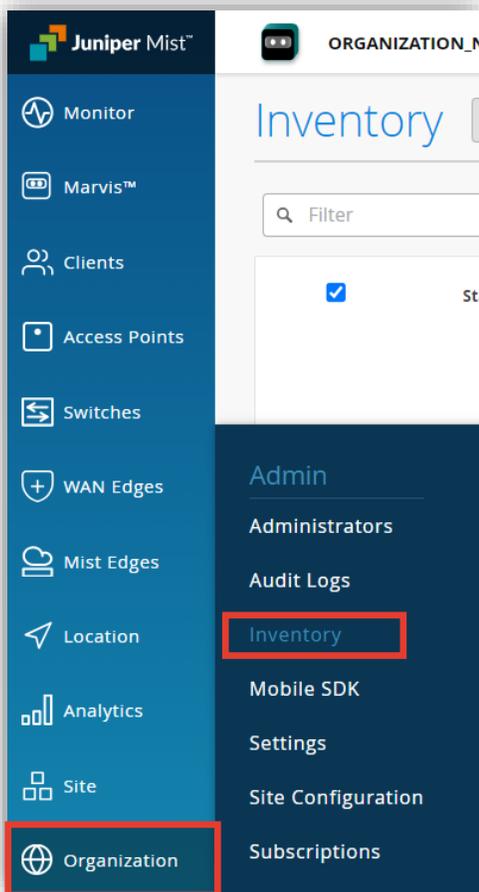

[WAN Edges] > [WAN Edges] より、Site
を選択することでも確認できます

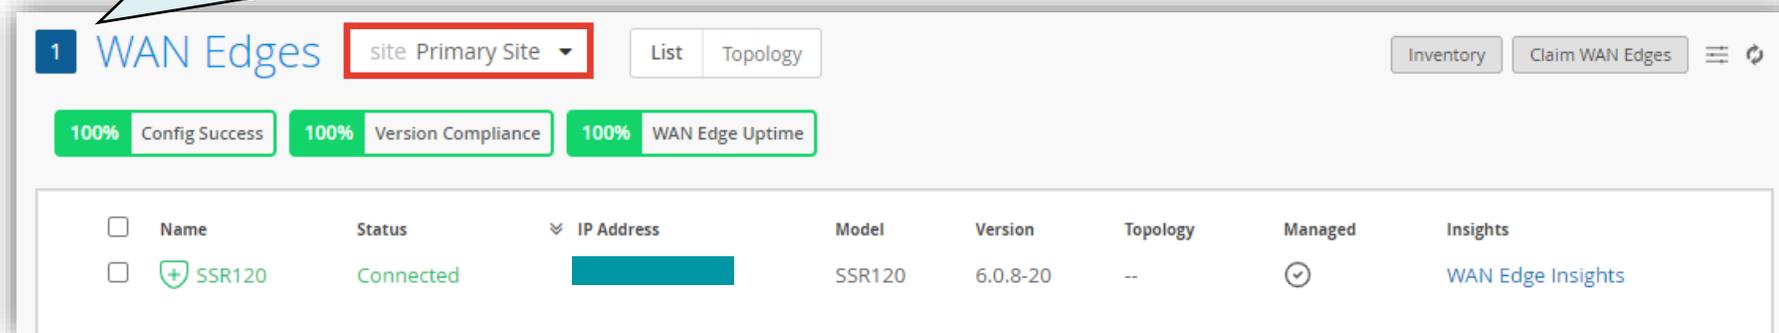

Site の変更 1

WAN Edge のアサイン先 Site を変更する: [Organization] > [Inventory] から変更

1. アサイン先の Site を変更する場合、同じ [Inventory] の項目にて行います
2. 一覧から対象の WAN Edge を選択し、[More] にて表示されるプルダウンから [Assign to Site] をクリックします

The screenshot displays the Juniper Inventory management interface. At the top, there are navigation tabs for 'Access Points', 'Switches', 'WAN Edges', 'Mist Edges', and 'Installed Base'. The 'WAN Edges' tab is active. A dropdown menu is open, showing options: 'Assign To Site', 'Rename', and 'Release'. The 'Assign To Site' option is highlighted. Below the navigation, there is a search bar labeled 'Filter' and a table of WAN Edge devices. The table has columns for 'Status', 'Name', 'MAC Address', 'Model', 'Site', 'Serial Number', and 'SKU'. One device is selected, indicated by a checked checkbox in the first column. The device details are: Status: Connected, Model: SSR120, Site: Primary Site, and SKU: SSR120-AA.

	Status	Name	MAC Address	Model	Site	Serial Number	SKU
<input checked="" type="checkbox"/>	Connected			SSR120	Primary Site		SSR120-AA

Site の変更 1

WAN Edge のアサイン先 Site を変更する: [Organization] > [Inventory] から変更

3. 変更先の Site を選択し [Assign to Site] をクリックします

The image illustrates the process of changing the site assigned to a WAN Edge. It consists of two screenshots of the 'Assign WAN Edges' dialog box.


Top Screenshot: The dialog box shows 'Assign 1 selected WAN Edge to site' with a dropdown menu currently set to 'site Primary Site'. A callout box points to this dropdown with the text '現在アサインされている Site' (Site currently assigned). Below the dropdown is a search bar labeled 'Search by Site Name or Site Group' and a list of available sites: DC-0 hub, DC-1 hub, Fukuoka spoke, Nagoya spoke, Osaka spoke, and Tokyo spoke. A callout box points to this list with the text '変更先の Site を選択します' (Select the site to change to). The 'Assign to Site' button is visible but disabled.

Bottom Screenshot: The dialog box shows the same 'Assign 1 selected WAN Edge to site' but the dropdown menu is now set to 'site Tokyo'. The 'Assign to Site' button is now highlighted with a red box, indicating it should be clicked to complete the assignment. The 'Cancel' button is also visible.

Site の変更 1

WAN Edge のアサイン先 Site を変更する: [Organization] > [Inventory] から変更

4. 確認画面が表示されます
登録内容を確認し、[Close] をクリックします


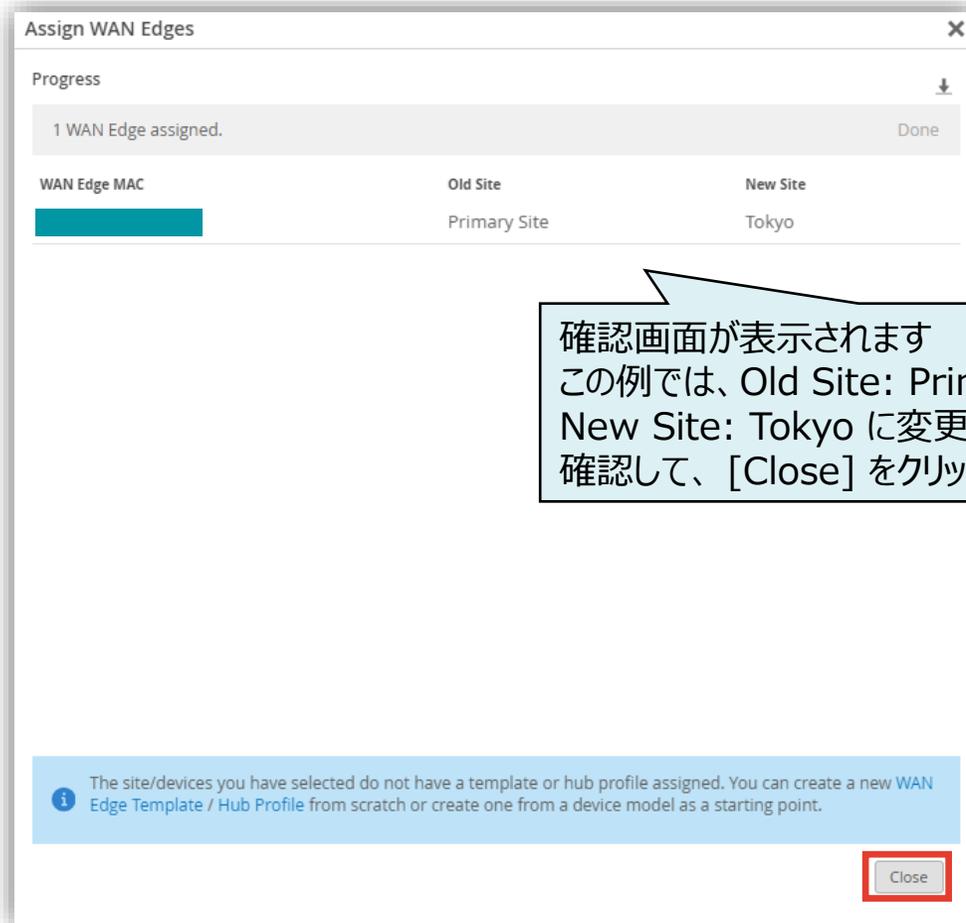


確認画面が表示されます
この例では、Old Site: Primary Site から
New Site: Tokyo に変更しています
確認して、[Close] をクリックします


Site の変更 1

WAN Edge のアサイン先 Site を変更する: [Organization] > [Inventory] から変更

5. [Organization] から [Inventory] で、[WAN Edges] タブをクリック、Site が変更されたことを確認します

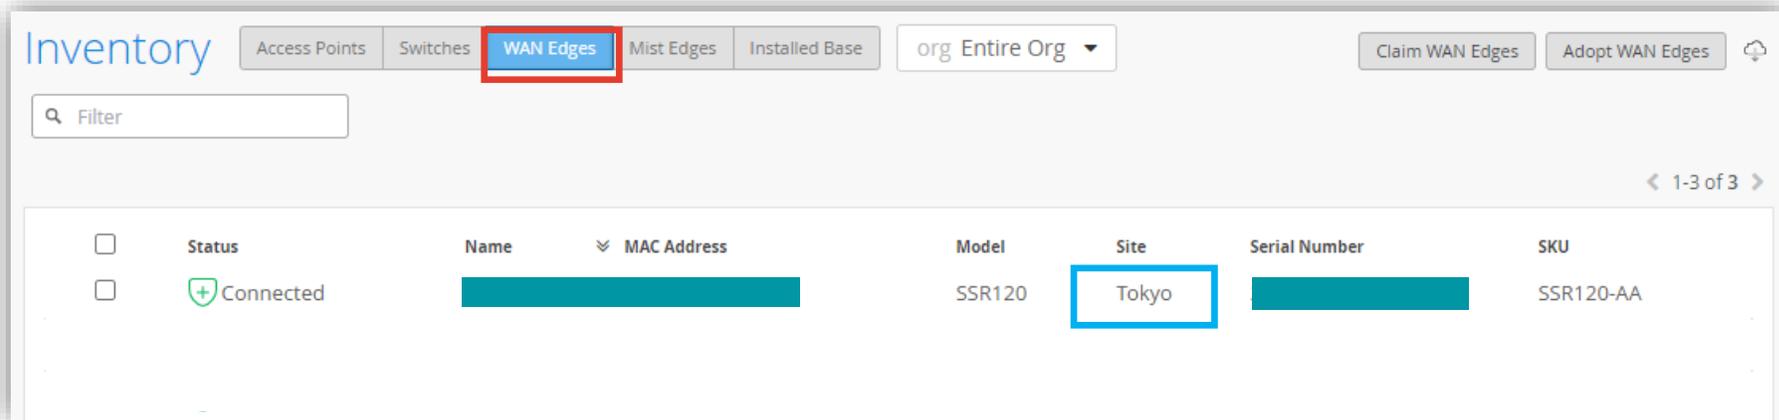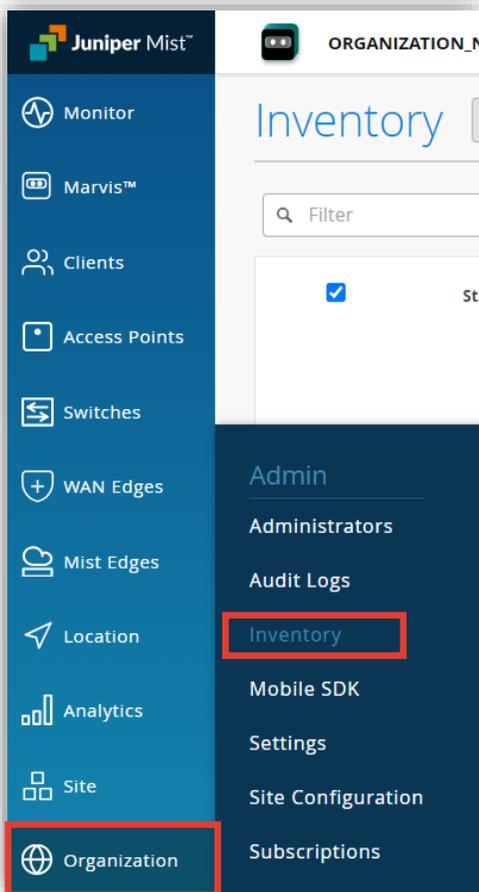

[WAN Edges] > [WAN Edges] より、Site
を選択することでも確認できます

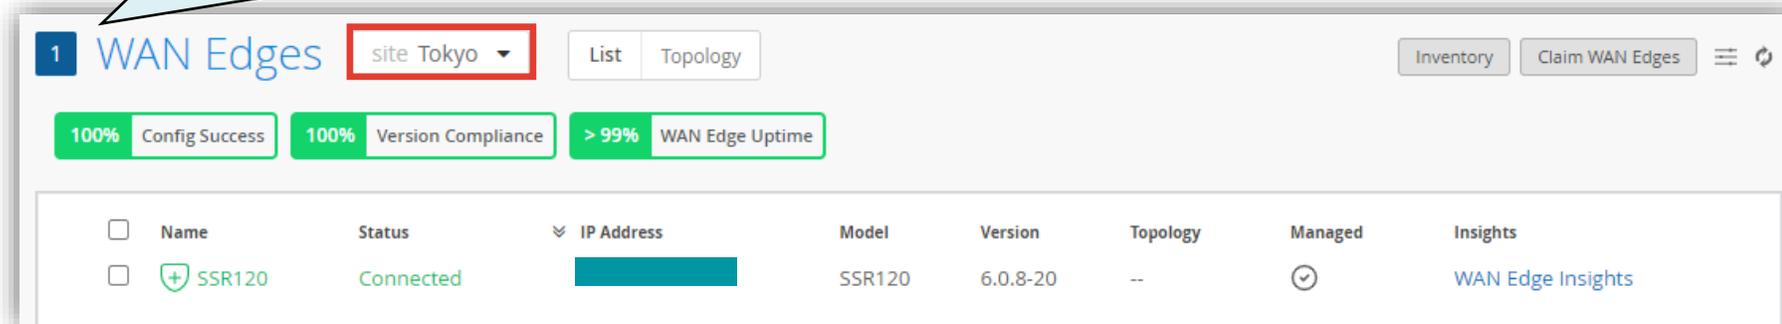

Site の変更 2

WAN Edge のアサイン先 Site を変更する: [WAN Edges] > [WAN Edges] から変更

1. [WAN Edges] の項目から、アサイン先の Site を変更することが可能です
Site を選択し、一覧からアサイン先を変更するスイッチを選択します
2. [More] をクリックし表示されるプルダウンの項目の中から [Assign to Site] をクリックします

The screenshot shows the Juniper Mist Edge management interface. The left sidebar contains navigation options: Monitor, Marvis™, Clients, Access Points, Switches, WAN Edges (highlighted with a red box), and Mist Edges. The main content area is titled '1 WAN Edges' and shows a dropdown menu for 'site Tokyo' (highlighted with a red box and a callout 'Site を選択'). Below this are three status indicators: '100% Config Success', '100% Version Compliance', and '> 99% WAN Edge Uptime'. A table lists WAN Edge devices, with the first device 'SSR120' (Status: Connected) highlighted with a red box and a callout 'List 表示を選択'. A 'More' button (highlighted with a red box) is located above the table, and its dropdown menu is open, showing 'Assign To Site' (highlighted with a red box) and 'Rename' options.

<input checked="" type="checkbox"/>	Name	Status	IP Address	Model	Version	Topology	Managed	Insights
<input checked="" type="checkbox"/>	SSR120	Connected	[Redacted]	SSR120	6.0.8-20	--	🕒	WAN Edge Insights

Site の変更 2

WAN Edge のアサイン先 Site を変更する: [WAN Edges] > [WAN Edges] から変更


3. 変更先の Site を選択し [Assign to Site] をクリックします

The image shows two sequential screenshots of the 'Assign WAN Edges' dialog box. In the first screenshot, the 'site Tokyo' dropdown is highlighted with a red box, and a callout bubble points to it with the text '現在アサインされている Site'. Below it, a search dropdown is open, listing various sites including 'DC-0 hub', 'DC-1 hub', 'Fukuoka spoke', 'Nagoya spoke', 'Osaka spoke', 'Primary Site', and 'Tokyo spoke'. A callout bubble points to this list with the text '変更先の Site を選択します'. In the second screenshot, the dropdown now shows 'site Primary Site' selected, and the 'Assign to Site' button is highlighted with a red box.

Site の変更 2

WAN Edge のアサイン先 Site を変更する: [WAN Edges] > [WAN Edges] から変更

4. 確認画面が表示されます
登録内容を確認し、[Close] をクリックします


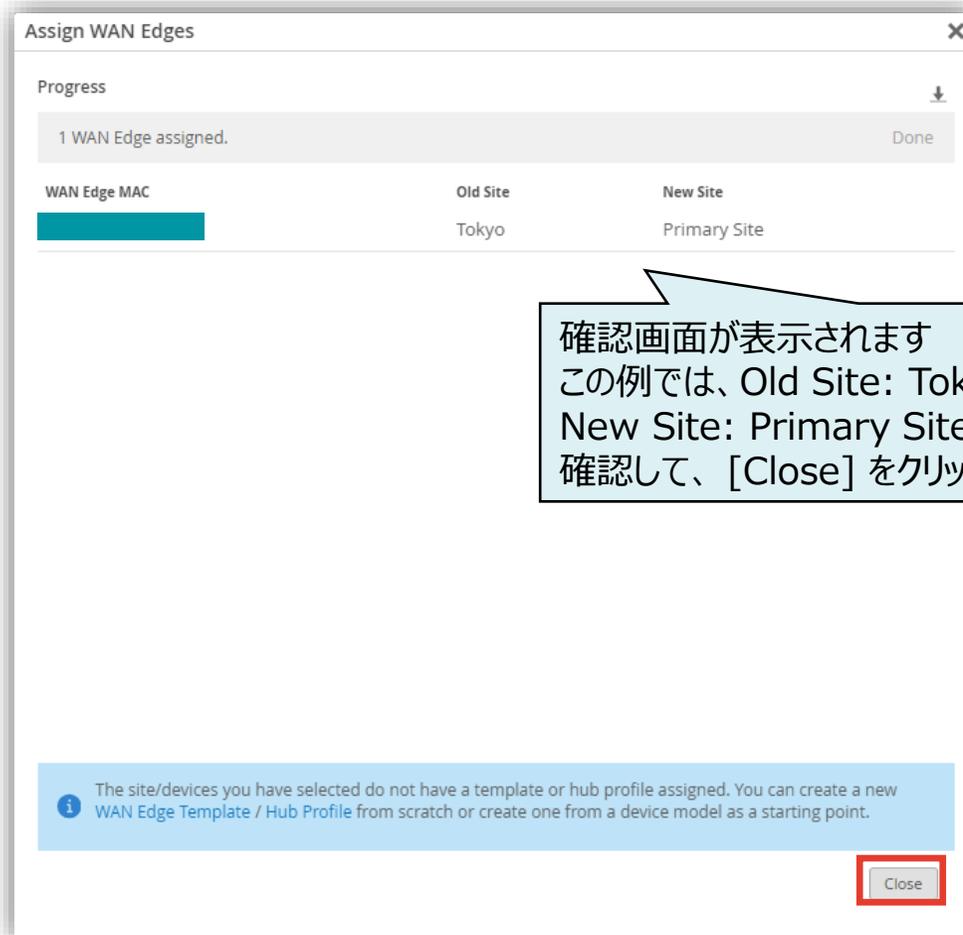


確認画面が表示されます
この例では、Old Site: Tokyo から
New Site: Primary Site に変更しています
確認して、[Close] をクリックします


Site の変更 2

WAN Edge のアサイン先 Site を変更する: [WAN Edges] > [WAN Edges] から変更

5. [Organization] から [Inventory] で、[WAN Edges] タブをクリック、Site が変更されたことを確認します

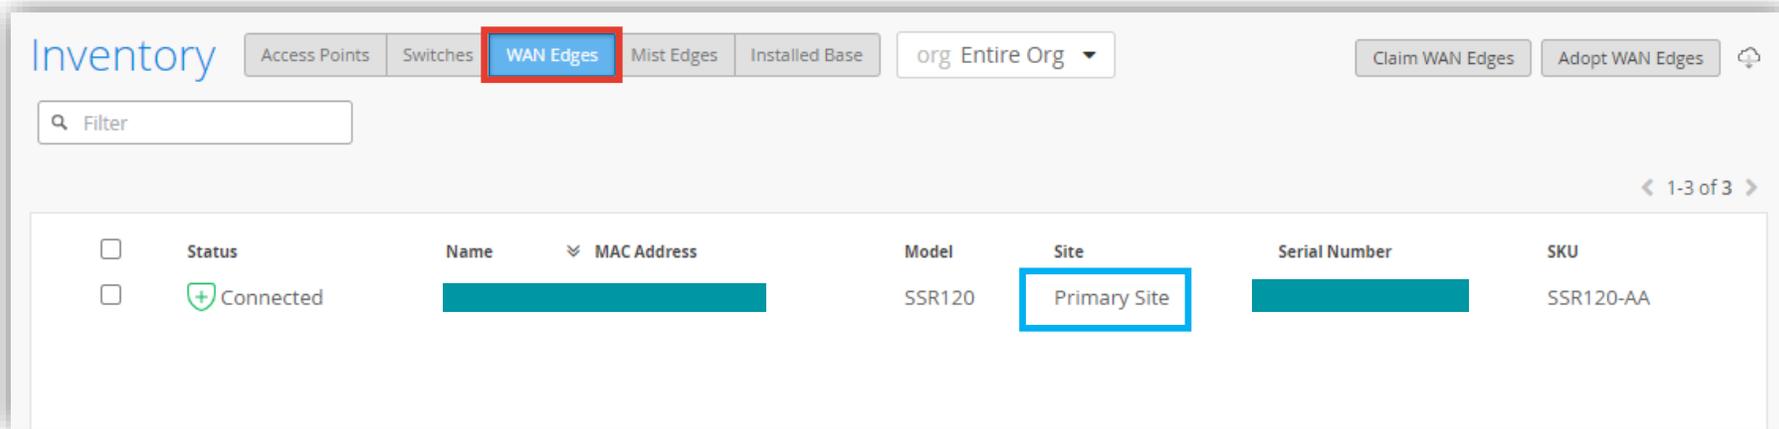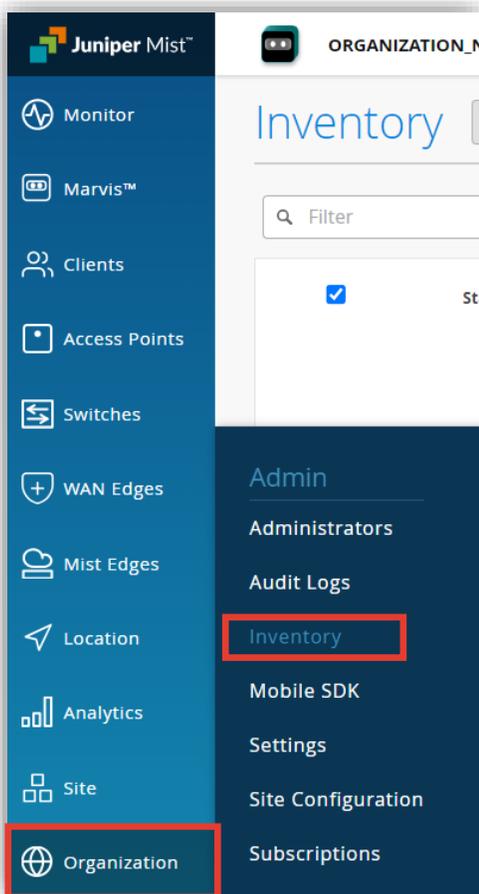

[WAN Edges] > [WAN Edges] より、Site
を選択することでも確認できます

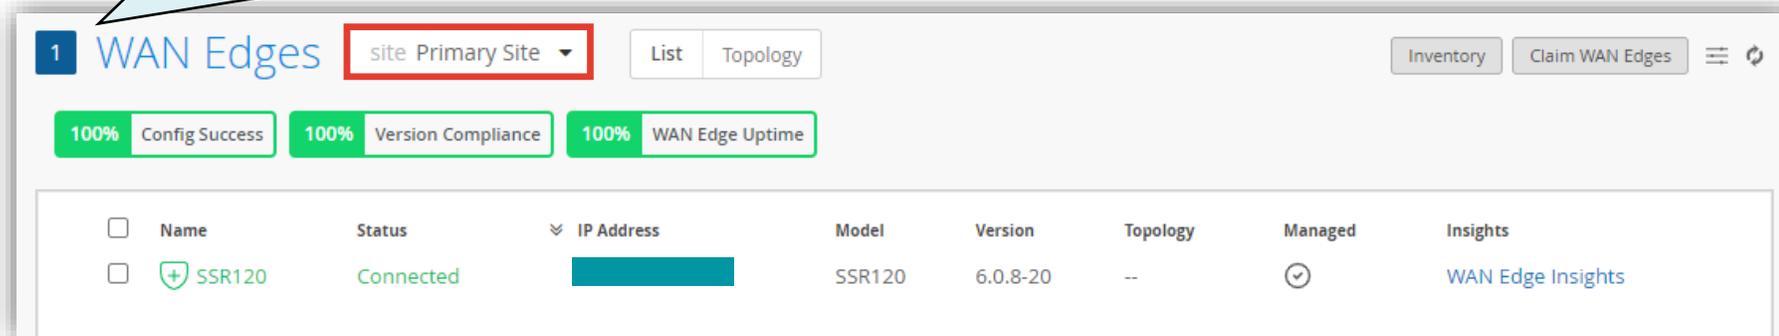



Thank you

JUNIPER
NETWORKS®